

HOW TO ADJUST SLIDING GLASS DOOR ROLLERS

Materials Required

Putty knife

Phillips screwdriver

Safety Glasses

Gloves

This is how to adjust the doors rollers to ensure smooth operation and maintain weather tightness.

1. First thing you want to do is check the roller wheels. There are two adjustments on the door panel, covered by plug covers.



2. Using a stiff putty knife, remove these plug covers. The screw ports allow access to Phillip head screws that raise and adjust the door.



3. When you need to raise the door, place the putty knife under the door and push the door upwards. This takes pressure off the wheel.



Safety Precautions

This activity is appropriate for individuals with an understanding of how to use simple hand tools. Remember to wear eye protection and to make sure that pets and small children are not present when performing these activities.

For questions, please contact us:

1.800.MILGARD

milgard.com

4. To raise the door, turn the screw clockwise. To lower the door, turn the screw counter-clockwise. Whenever you adjust one side, you must adjust the other side accordingly.



5. To tell if there is an even reveal, slide the door towards the door jam and line it up to make sure the gap is even from the top to bottom.



6. Once you have adjusted the door and it is sliding properly, re-insert the plugs.